


## Spacer for installation on East-/West roof for on-roof collectors type vertical and horizontal gevoSol/sunnySol



## Spacer for installation on East-/West roof for on-roof collectors type vertical and horizontal gevoSol / sunnySol

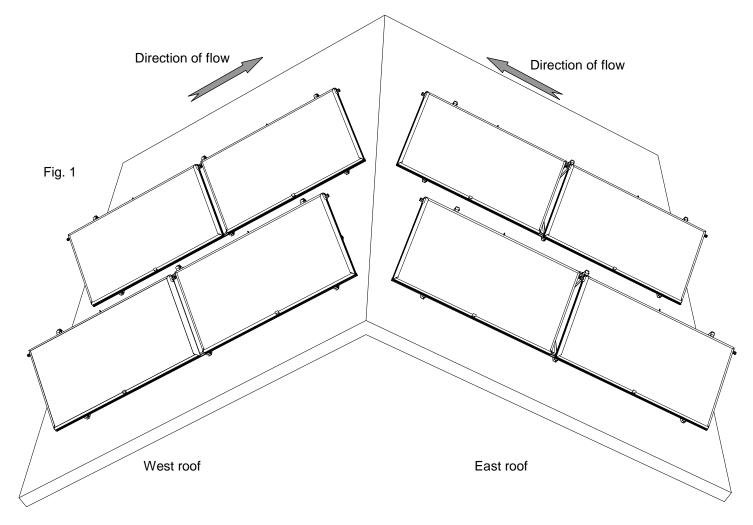

The flow through the collectors has to be from the bottom (eaves gutter) to the top (roof ridge). For West roofs the collectors have to be streamed from the left to the right, for East roofs the have to be streamed from the right to the left.


The separately ordered collectors are executed with additional draining drillings at the bottom corner. After consulting our technicians these drillings can be made on site as well.


| Pos | Code  | Designation               | Basic set |
|-----|-------|---------------------------|-----------|
| 1   | 03979 | Spacer 20 mm              | 2         |
| 2   | 29510 | T-headed screw M8 x 20 mm | 2         |
| 3   | 29206 | Disc M8                   | 2         |
| 4   | 29272 | Nut M8                    | 2         |

| Pos | Code  | Designation               | Extension set |
|-----|-------|---------------------------|---------------|
| 5   | 03980 | Spacer 60 mm              | 2             |
| 6   | 29510 | T-headed screw M8 x 20 mm | 2             |
| 7   | 29206 | Disc M8                   | 2             |
| 8   | 29272 | Nut M8                    | 2             |



## Spacer for installation on East-/West roof for on-roof collectors type vertical and horizontal gevoSol / sunnySol

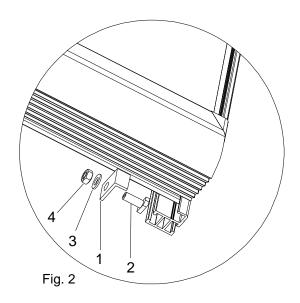

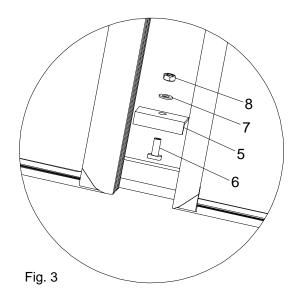

- 1. Install the mounting set for fixing the installation rack and the required supporting frames according to the attached installation manuals.
- 2. Before inserting the collectors into the supporting profile the spacer 20 mm of the basic set has to be installed at the bottom corner (fig. 2).
- **3.** For installations with more than one collector a spacer 60 mm of the extension set has to be installed between the collectors (fig. 3).

## ATTENTION!

All bolts and nuts for weight-bearing connections have to be tightened with a calibrated torque handle. The torque table can be found in the "Safety and installation manual for flat plate collectors".